

INSTALLATION GUIDE

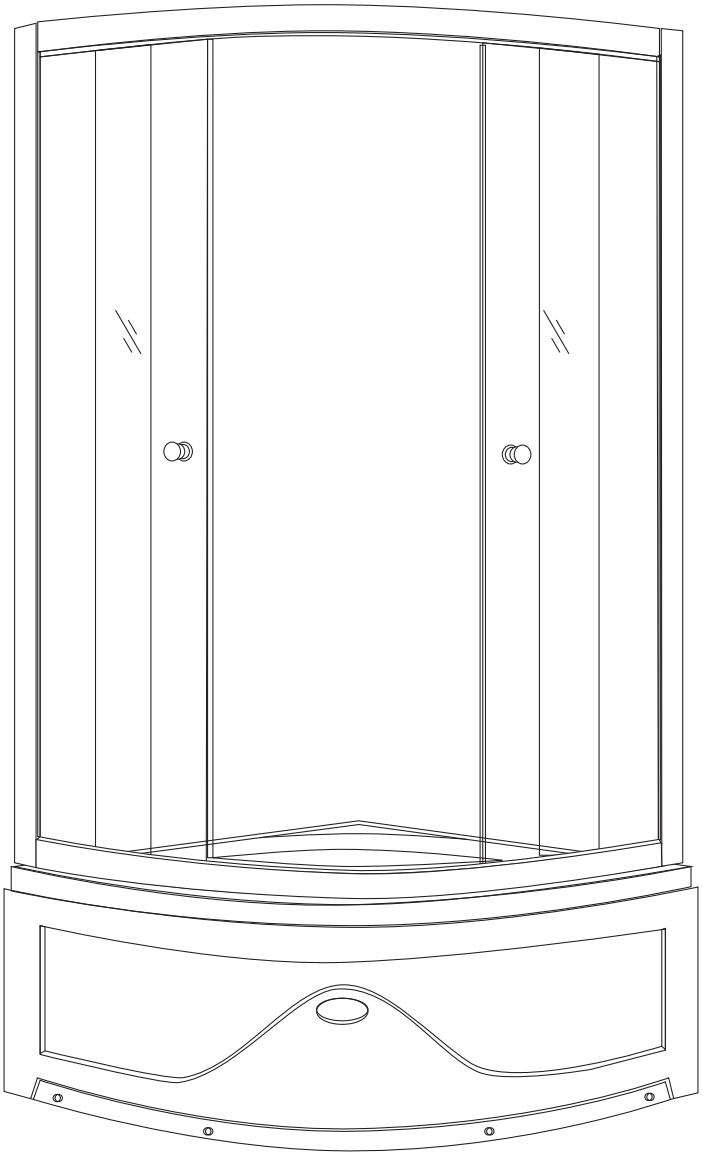


Size:80*80*195cm
90*90*195cm
100*100*195cm

Our product may have changes without prior notice.

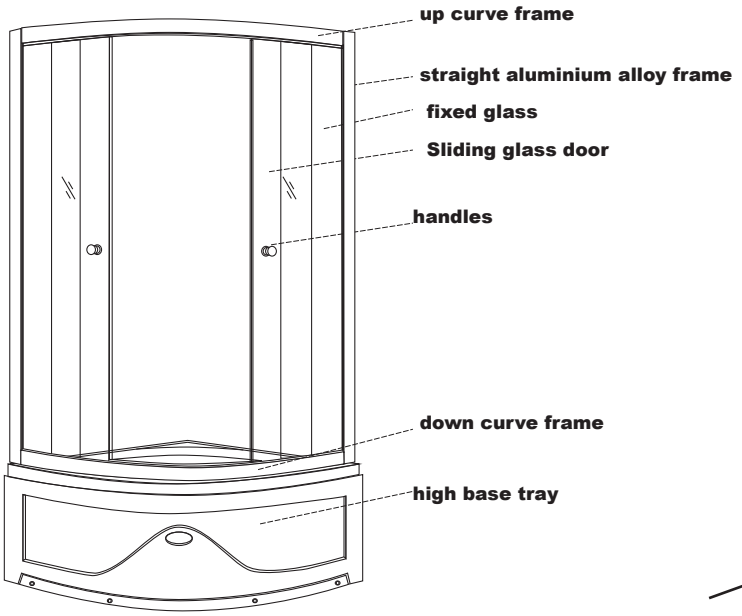



High basin simple room

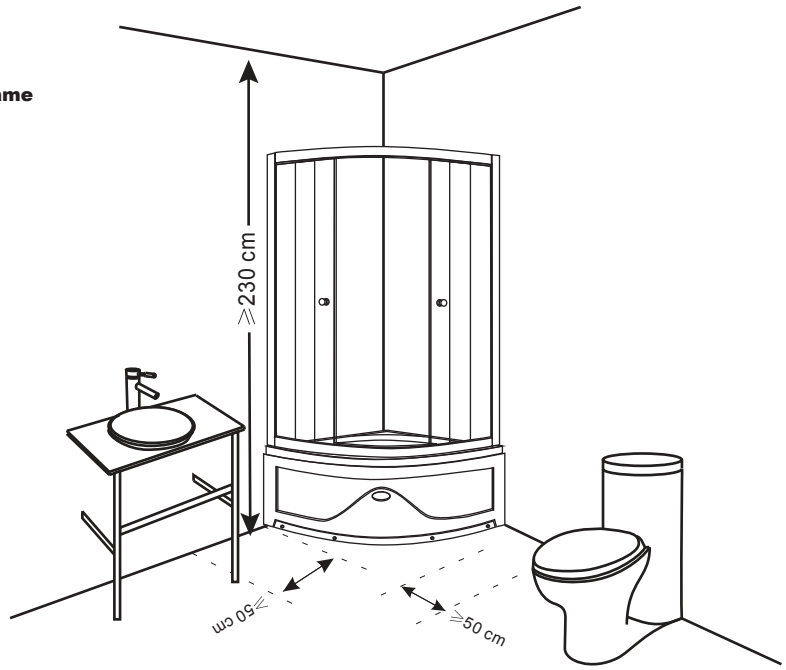


installation room


Installation of tray

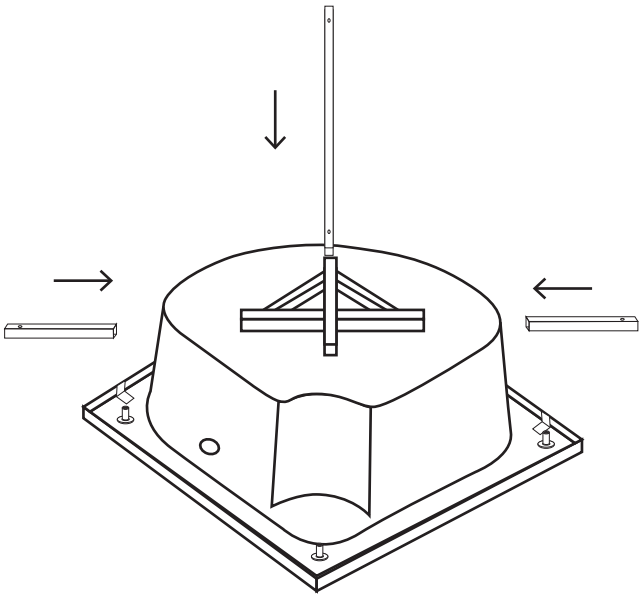

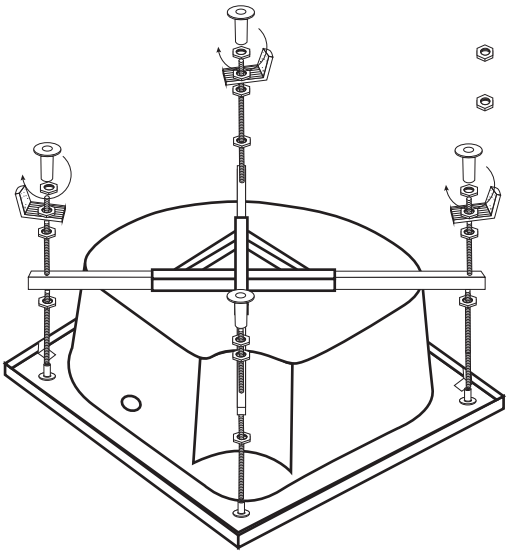


Keep the stainless steel shelf of the bottom basin to be flat, then using the screw bolt to fixed with tray and shelf, at last, installing the round feet.

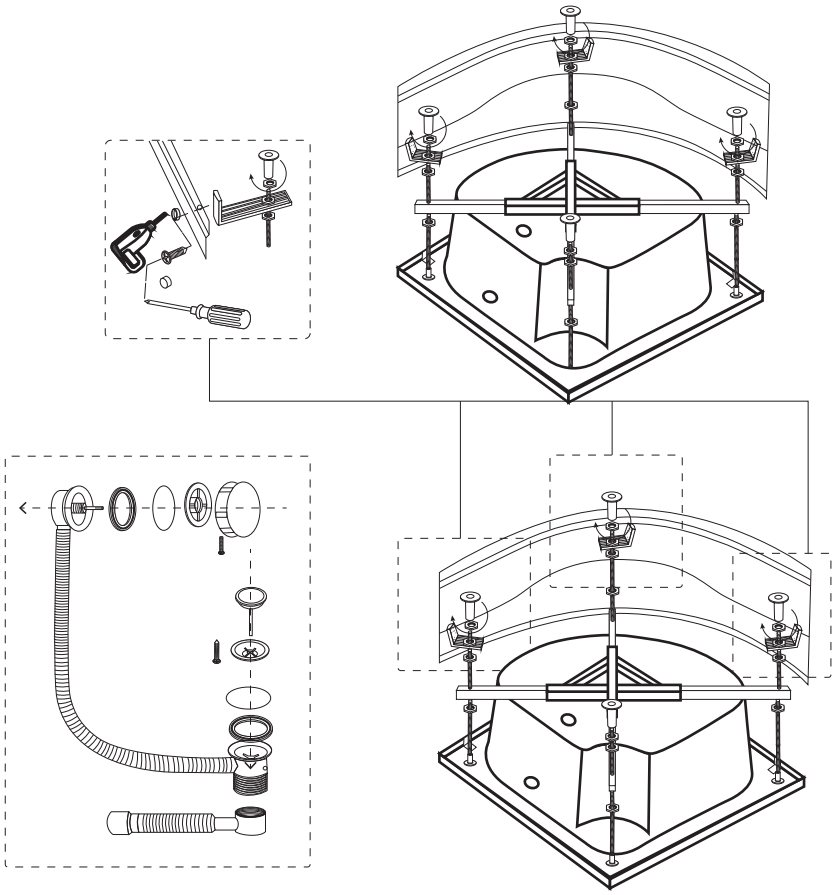


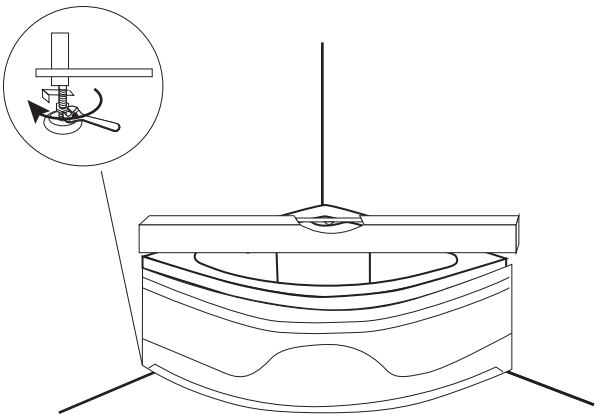


As shown，installing the skirt of the high tray, using the 7 shape shelf to fix the drain pipe, adjusting the height of the feet until the tray is horizontal. Put the tray to suitable place, make it two side attached the wall nearby.


As shown, using the screw to fix the up (down) curve frames and the two sides straight aluminium alloy frames through these holes..

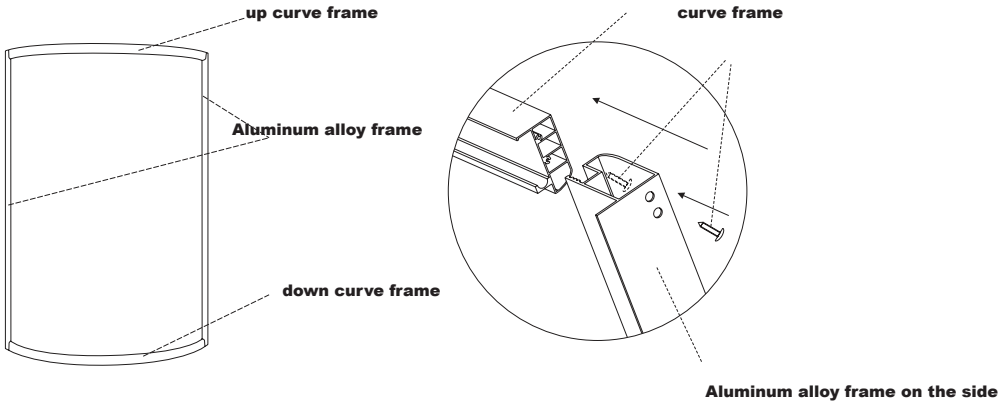

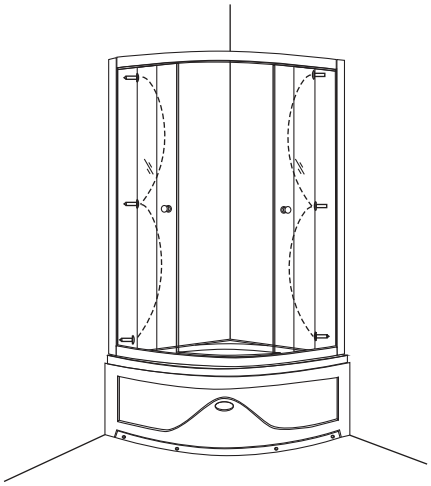


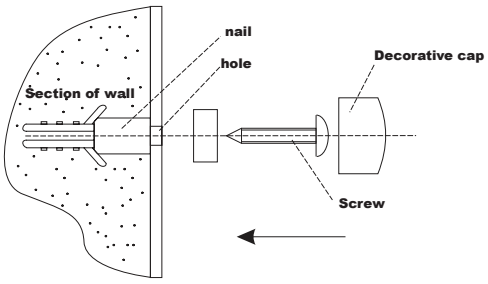

Put the browne in the side of sliding glass,then fixed glass stuck in the slot in the side of the aluminum alloy . Take the aluminum shelves loaded onto the bottom tray ,move it in the right place, screw the aluminum side wall set and lock it prison .

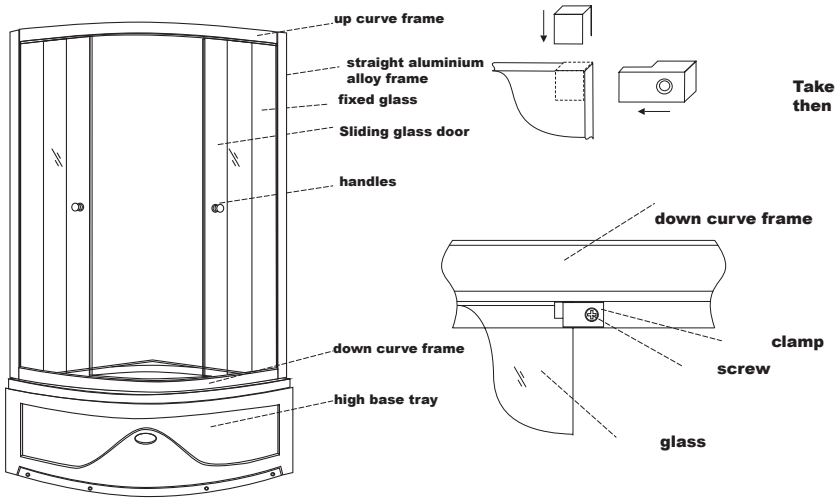

Take the screw in clamp on the curved track, then put the sliding glass withpulley in the curved track slot.

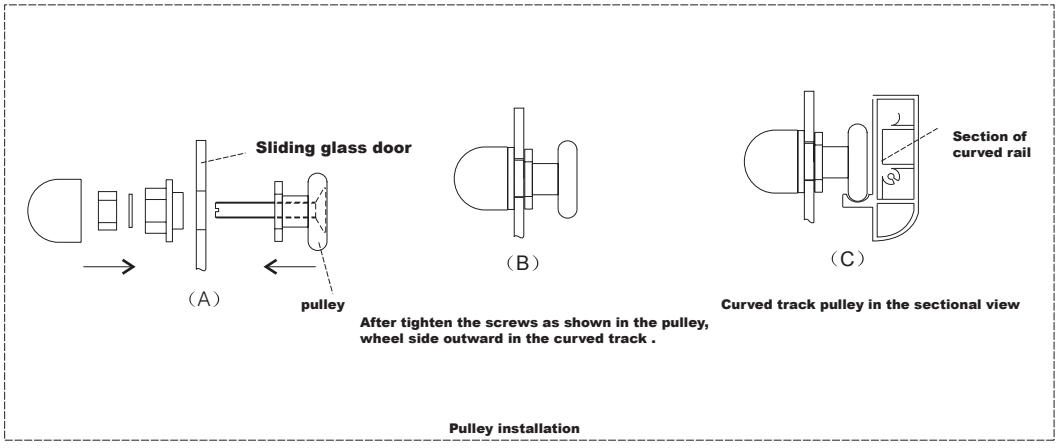

After tighten the screws as shown in the pulley, wheel side outward in the curved track .

Curved track pulley in the sectional view

Pulley installation

