
IMPORTANT


Please read carefully the following instructions before installing your shower enclosure.

If you have any questions on this shower enclosure installation - please contact us.

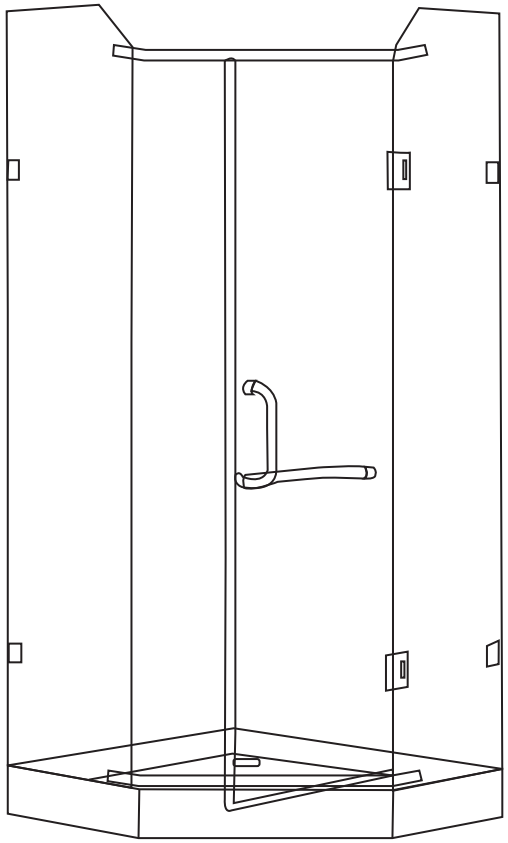


Our product may have changes without prior notice.

①Tray installation

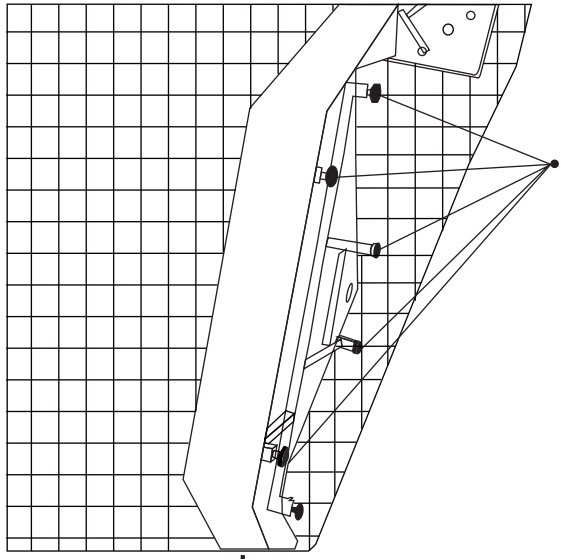

Adjusting the foot to make the tray in horizontal line .


Install drainage then lay down the tray .

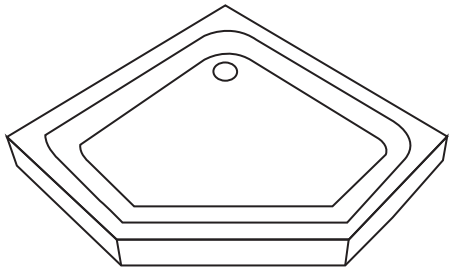


②Bottom water-proof bar installation


Insert it into ciment, meanwhile, make sure it's horizontal



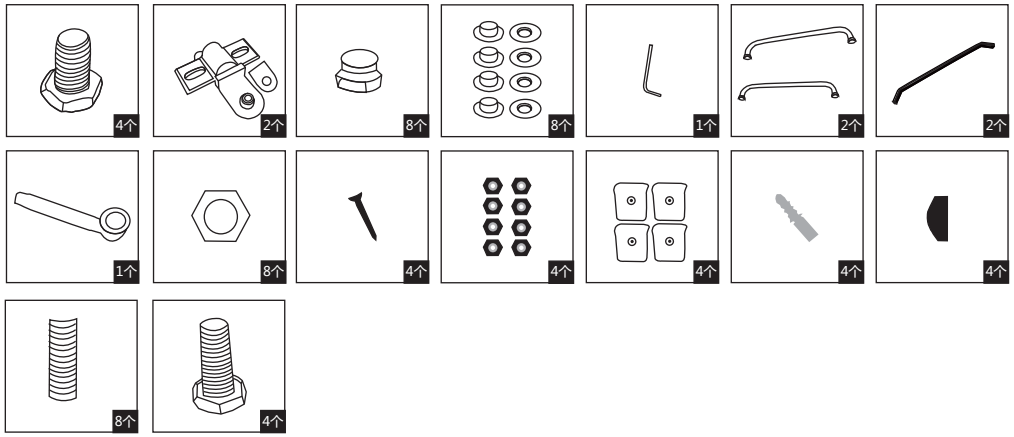


Tools Required

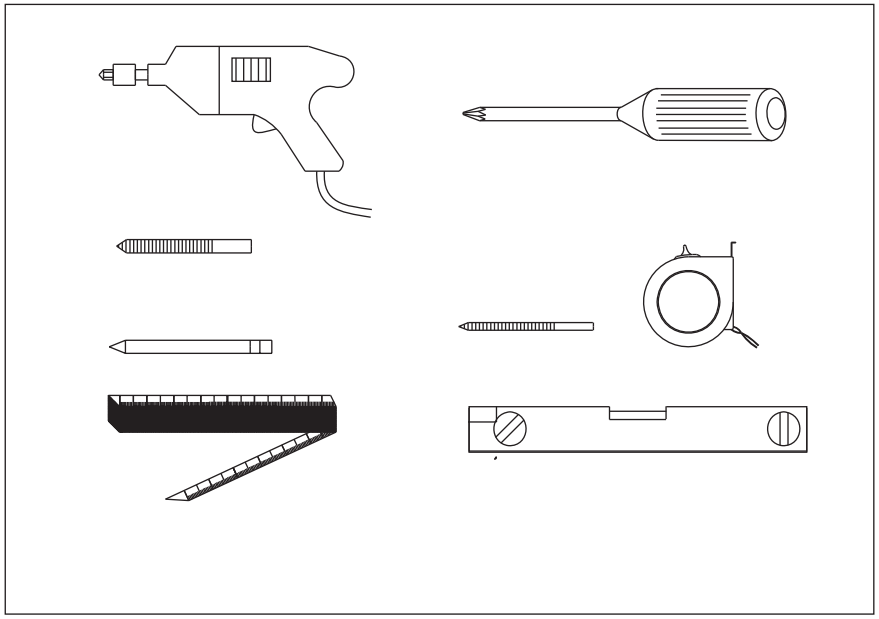


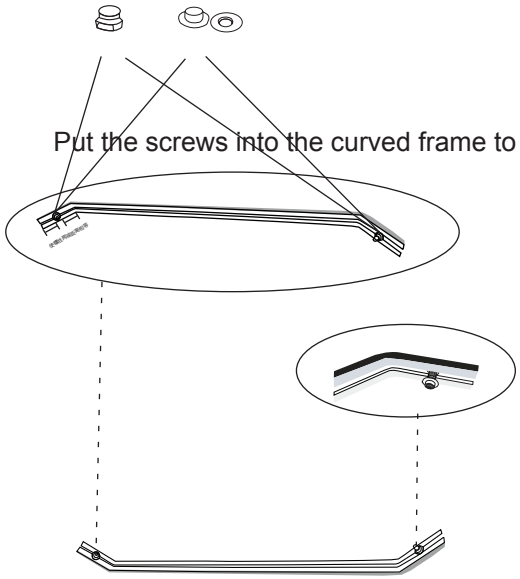



Put the screws into the curved frame to make it be balance .

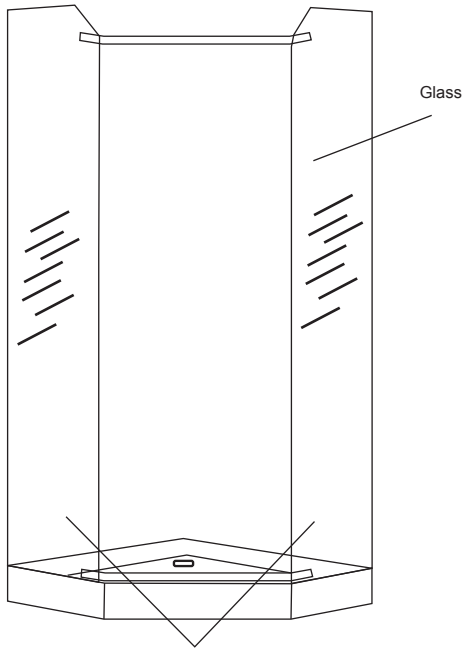


Lay down the tray and then put the assembled enclosure on it .

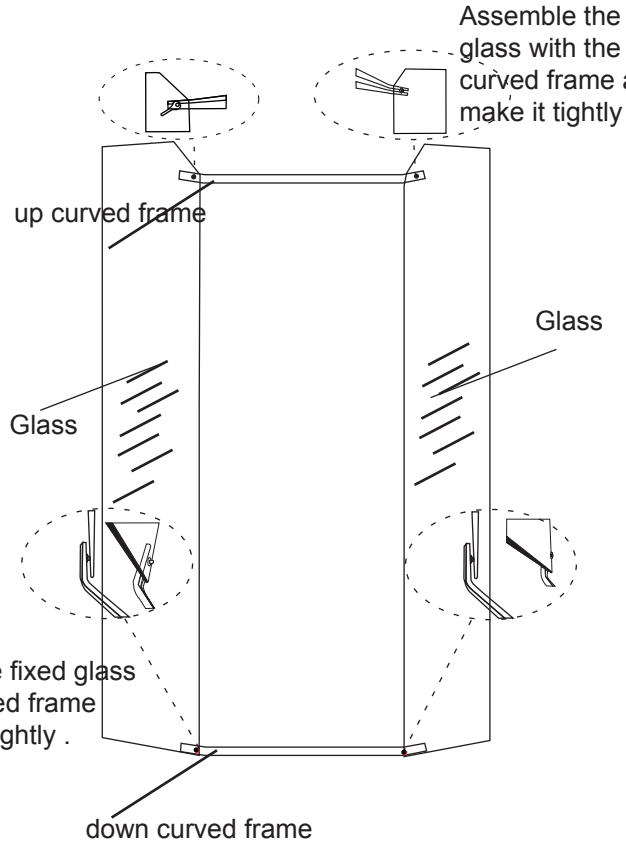

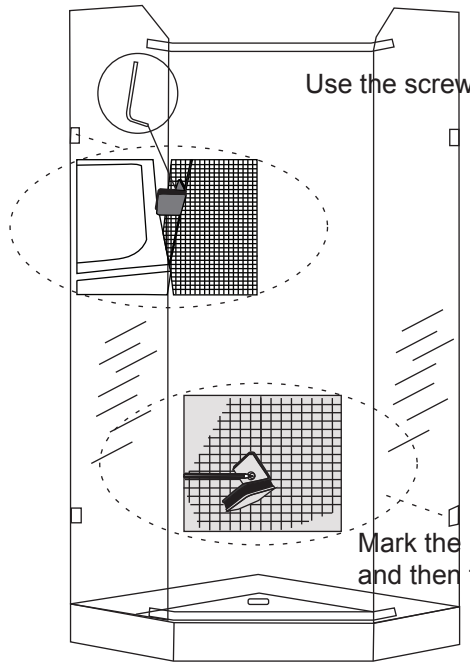

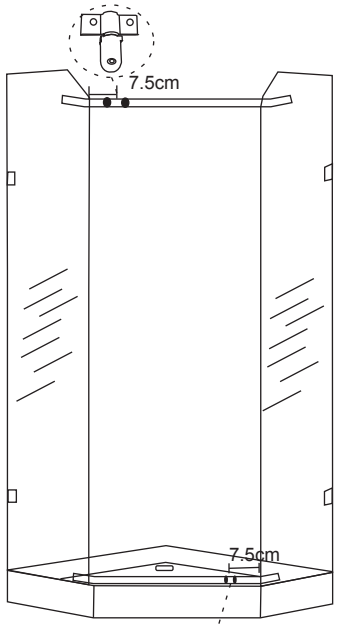


screwdriver rocker




Open the spare parts with the screwdriver as picture .


The position of rocker should be adjusted at the same time with the different position of glass door .

Fix the rocker tightly with the screwdriver .
Adjusting is needed when assembling .



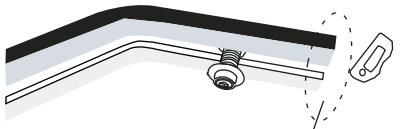


Put the Decorative cover into it .

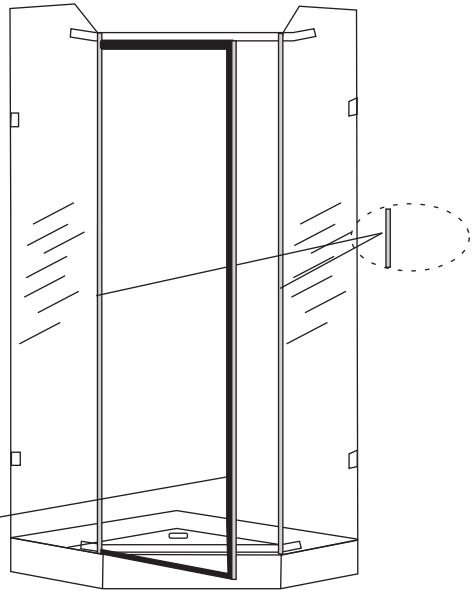

Assemble the waterproof strip onto the door glass from the bottom to the top as picture.

Assemble the magnetic striponto the door glass from the bottom to the top as picture.

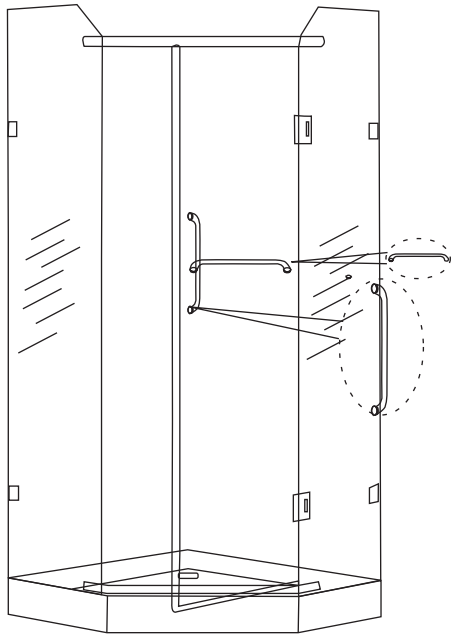

According to the situation of the glass door , adjusting the rocker when needed .

Product Maintenance

1.Tempered glass can be clean with nonabrasive bathroom cleaner or any glass cleaner you use elsewhere in your home. Rinse off any glass cleaner that gets on the aluminum as soon as possible to avoid damage to the anodized surface。Avoid striking it with any sharp or hard odjects. Such damage can cause either immediate or delayed breakage of tempered glass.

2.The aluminum in your shower door is durable and resistant to water damage.It is adviseble, but not necessary to wipe it with your towel after your shower. Clean it as often as need to keep the buildup off. Never use any type of abrasive cleaner.Use only a soft damp cloth and nonabrasive bathroom cleaners.